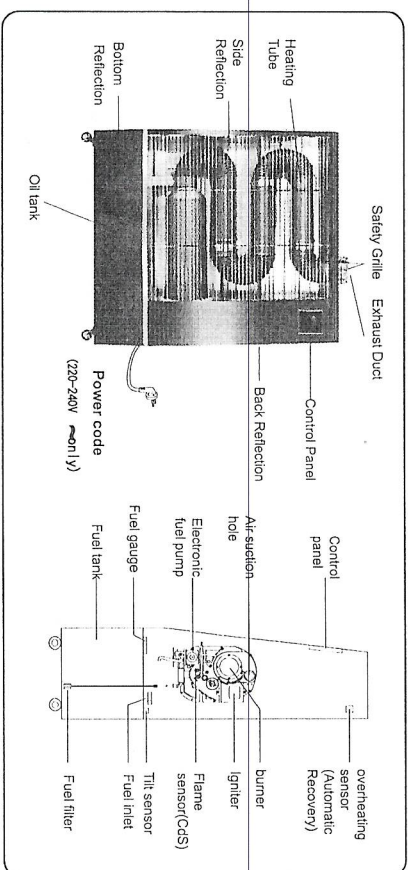


STRUCTURE & DESCRIPTION

STRUCTURE & DESCRIPTION FOR MODEL



CONTROLLER

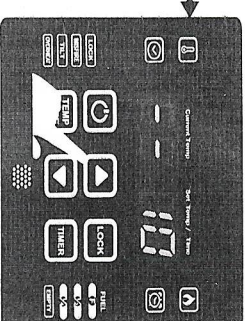
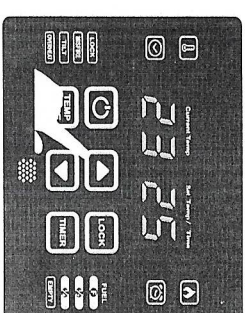
- 1. LED DISPLAY**
It displays the status of temperature, time, operation, and error, etc.
- 2. TEMPERATURE CONTROL MODE**
It is lighted at the temperature control mode.
- 3. TIME CONTROL MODE**
It is lighted at the time control mode.
- 4. IR RECEIVER FOR REMOTE CONTROLLER**
- 5. ON / OFF**
Run and stop button
- 6. TEMP/TIME SELECTION BUTTON**
To select temperature or time control mode.
- 7. UP/DOWN**
To set or change the temperature or time.
- 8. LOCK**
If you push this lock button for 3sec, the controller is locked. And if you push again for 3sec, this function is released.
- 9. TIMER**
To select whether off timer mode is operated or not.
- 10. TIMER LED**
To show whether off timer mode is operating.
- 11. MISFIRE**
It shows the misfire on the burner.
- 12. OPERATION LAMP**
It is lighted on operation.
- 13. FUEL GAUGE DISPLAY**
It displays fuel remain in 3 steps.
- 14. OVERHEATING**
It shows overheating status if the temperature goes up to 105°C.
- 15. TILT SENSOR**
It is turned on in case of inclination over 30deg. or an excessive motion is detected.
- 16. LACK OF FUEL**
It shows the remaining fuel amount.
- 17. LOCK LED**
When the machine is in the lock mode, the LED of this LOCK is lighted.

HOW TO USE

OPERATION & STOP

- 1. START WITH PRESSING "ON/OFF" SWITCH.**
 - Heater will be turned ON with "beep" sound, and automatically operated.
 - If you wish to stop the unit press "ON/OFF" switch one more time.
- 2. SELECT THE DESIRED OPERATION TYPE USING "TEMP/TIME" SWITCH.**

- 3. Set the time or temperature by pressing ▲ ▼ switch.**
 - You can set the desired temperature between 0~40°C.
 - Set the desired time limit between 15min ~ UP → ON



Tip

- In order to be operated, the setting temperature should be higher than current temperature.
- After power On, the default mode is temperature control mode.
- During the operation if you push On/Off button, the heater is stop and the off timer function is cancelled.

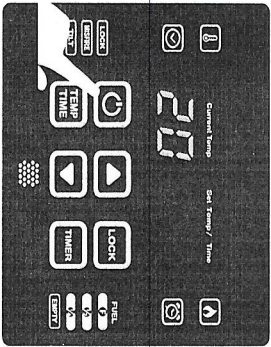
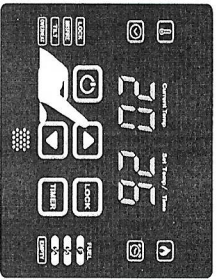
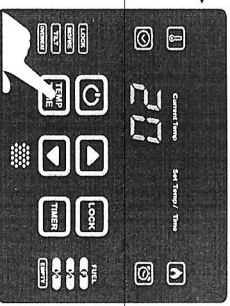

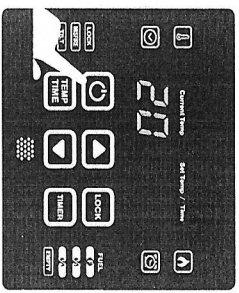
The model equipped "pre-heater" is operating its heater for 1min. after burner ignition. By this device, the oil warms up before being supplied to the burner, which improve remarkably the ignition and inflammability.

The model equipped solenoid valve (by-pass device) makes the remaining oil returned to the oil tank. For 10sec. from the time of burner off, the solenoid valve is operation, which makes remaining oil returned to the oil tank, and by this device, the smell caused by unburned gas are remarkably strunk.

HOW TO USE

TEMPERATURE CONTROL

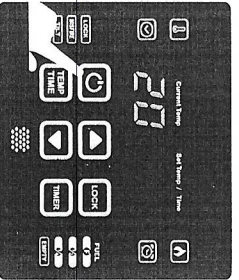
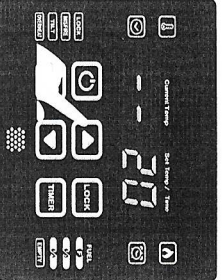
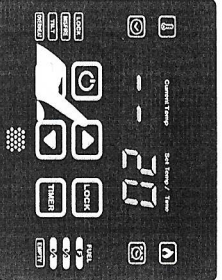
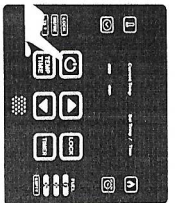
This mode enables the user set the desired temperature, and once it is fixed this heater works automatically with running and stop repeatedly to meet this temperature. (If power ON and Heater starts operation, the temperature control mode will be operated as default.)

<p>1. Push On/Off button.</p> 	
<p>3. By pushing '▲' button, please select desire temperature.</p> <ul style="list-style-type: none"> The setting range : 0~40°C · The default value : 25°C During the time you push ▼ or ▲, the setting temperature is increased/decreased very fast. The range of current temp display : -9~50°C 	<p>2. By pushing Temp/Time button, please select Temperature control mode.</p> <ul style="list-style-type: none"> At that time, Temperature control lamp is lighten. 
<p>5. When the setting temp. is higher 2°C than current temp., it starts operation, and the setting temp. is less than 1°C than current temp., the operation is stop.</p> <ul style="list-style-type: none"> Current temp. < Setting temp. ... Operation (+2°C) Current temp. > Setting temp. ... Operation stop (-1°C) 	<p>4. During operation, the current temp. and setting temp. both are displayed, and if you push On/Off button and make the operation stop, only current temp. is shown.</p>  <p>Tip</p> <ul style="list-style-type: none"> The current temp is less than -9°C (16°F), the display of the temp. is 'LO', and more than 50°C (99°F) it displays as 'HI' (50°C is not same value as 99°F, actually 37°C is same value as 99°F) The setting temperature is increased/decreased 1°C by pushing of (▲/▼) button, if you push the button more than for 2sec, the value is increased/decreased 1°C in 0.2 sec. If you push ▲ and ▼ button for 5sec, simultaneously, the unit is converted from °C to °F or from °F to °C. (The default unit is °C)

HOW TO USE

TIME CONTROL

1. Push On/Off button.

<p>2. By pushing Temp/Time button, please select Time control mode. At that time, Time control lamp is lighten.</p> 	<p>4. At the operation mode, the operation symbol and repetition time both are displayed, and when you make Off by pushing On/Off button, STOP symbol (---) only displayed. When the heater is in 'Interval Pause Time', STOP symbol (---) and repetition time both displayed.</p> 
<p>3. By pushing '▲' button, please select desire repetition time. When you increase or decrease the repetition time by pushing '▲' button, the time is blinking, and if you don't push button for 3sec, this displayed blinking time is set as 'Repetition time'. At that time, the former Repetition time is automatically erased.</p> 	<p>5. The repetition time can be set from 10min. to 55min. The operation is as much as setting time, and 5min. pause time, which is repeated. When you increase one more from max. time 55min. It goes to 'Constant operation'. This means, without pause time, the operation is constantly made.</p>  <p>Repetition time 20 means, every 20min. Operation and 5min. Pause</p>

